

## Verify Wedge Jumper Setting

If you have a Wedge, we recommend that you verify that the jumper is set for W2. In some cases, the jumper position may need to be changed, depending on the specific type of sound card used and the quality preferences.


The Wedge MIC OUT is connected to the sound card LINE IN. The default jumper setting is for the Line level. The default setting is recommended for SoundBlaster<sup>®</sup> and most other sound cards. See the [Table 2](#) for audio settings and their corresponding jumper settings.

**TABLE 2 Wedge Jumper Settings**

Audio Settings	Jumper Settings
Line level ( <b>default</b> )	W <sub>1</sub> enabled only
SoundBlaster mic level	W <sub>2</sub> enabled only
High mic level	W <sub>3</sub> enabled only
Low mic level	W <sub>4</sub> enabled only

### Procedure

1. Disconnect the power cord and remove the screw at the base of the Wedge.
2. Remove the TOP cover of the Wedge.

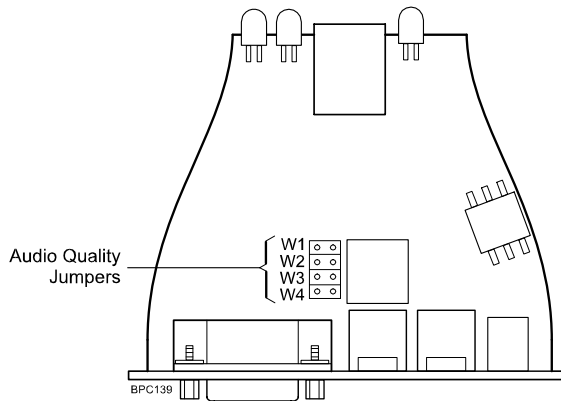

**FIGURE 2 Wedge Jumper Settings**

There are four sets of brass pins near the center of the board.

3. Make sure the jumper is on the W2 position (see [Figure 2](#)). Place the jumper on this position if it is not already there.
4. Place the top cover back on the Wedge and secure the screw through the base cover.



*End of procedure.*